


# SCREEN PRINTING COLD PEEL TRANSFER


## STEP 1

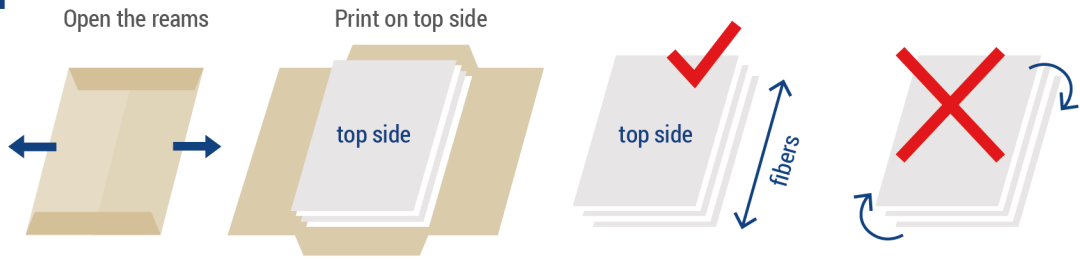

## STEP 2

Pre shrink the paper in the drying tunnel



Cover the paper until screen printing step

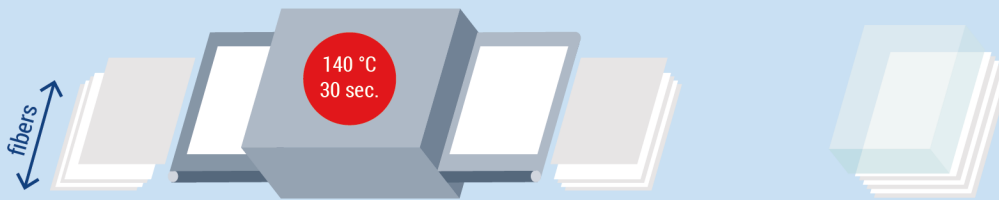

## STEP 3

Screen print each colour


Cure each screen printed ink in a drying tunnel

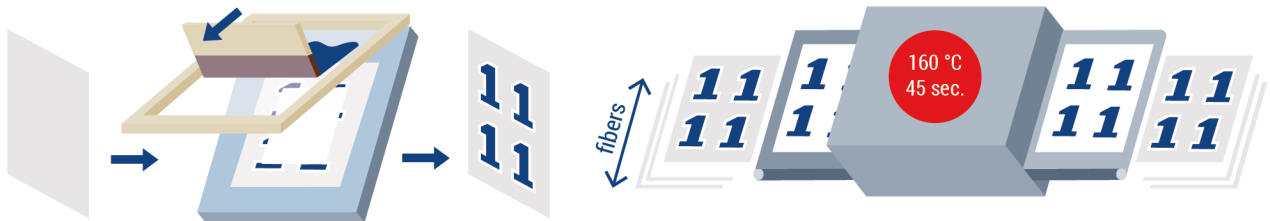


Make a rolling test to check if the curing is ok



To avoid miss registering, cover the printed sheets, in between each printed colour

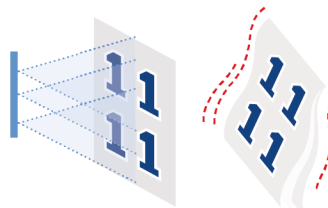


To enhance washing resistance:  
After the last colour, and just prior entering in the drying tunnel, spray adhesive powder. Remove excess of powder by shaking

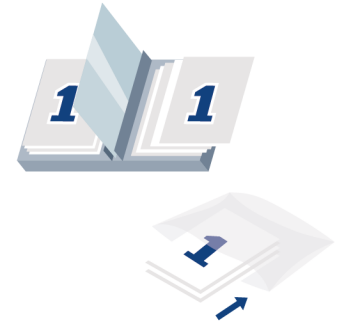

Cut and wrap the printed sheets in a sealed plastic bag

## STEP 4

Heat press the design on the garment within 6 months after printing

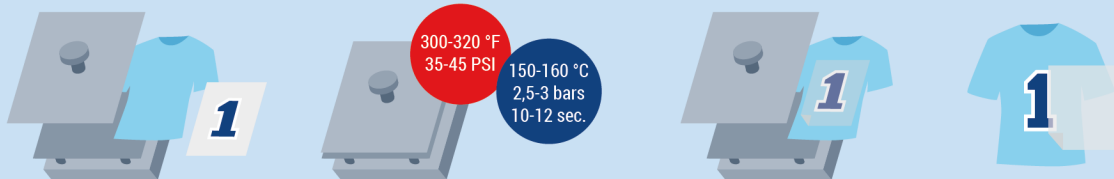

Tepid Peel (after 3 Seconds) or Cold Peel (after 15 Seconds)