


DIGITAL LASER TRANSFER FOR TEXTILE


STEP 1

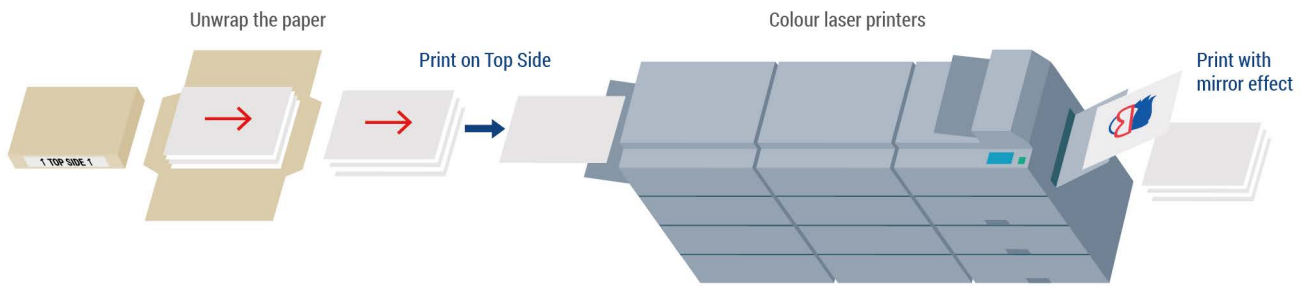

STEP 2

Screen print white or clear backing wider than laser printing (around 0,5 mm)



"Spray" hot melt powder, shake to remove excess

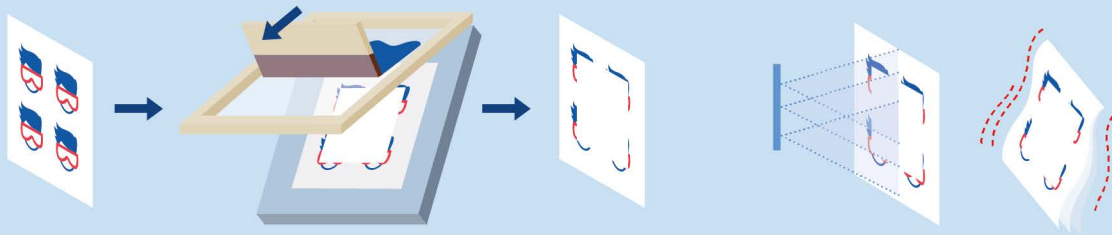

STEP 3

Cure the screen printed backing and hot melt powder in a drying tunnel

Cut and wrap the printed sheets in a sealed plastic bag

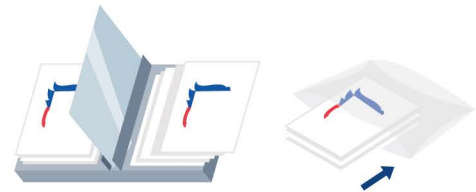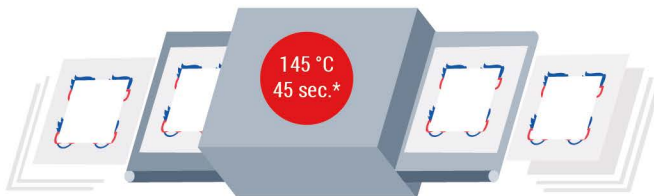

* Average. To adapt according to the equipments and backing used

STEP 4

Heat press

